 


THE-TIMER

 
Operators Manual

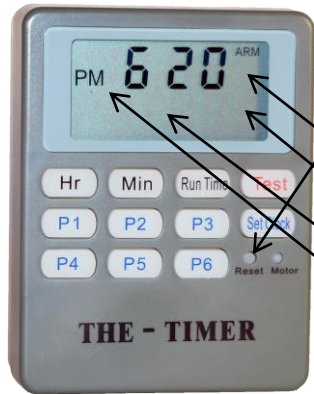

To Reset:

Push **Reset** button to clear all settings
 Display will show all indicators including:


- Blown fuse indicator
- Battery level indicator
- 12V/6V indicator
- AM/PM indicator

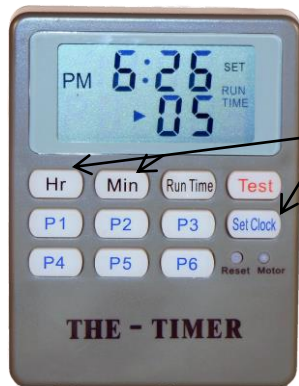

To Set Clock:

Push **Set Clock**
 Push **Hr & Min** buttons to the correct time of day

 Display shows 6:26 PM and run time of 5 seconds

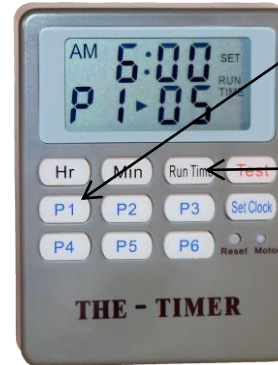


To Set Feed Time:

Push **P1** (for feeding period 1)
 Push **Hr & Min** buttons to the desired time you want your feeder to go off
 Push **Run Time** button to the desired length of run time


Repeat for **P2** through **P6** feeding periods

 Display shows feeding period 1 (**P1**) set to feed for a run time of 5 seconds at 6:00 AM

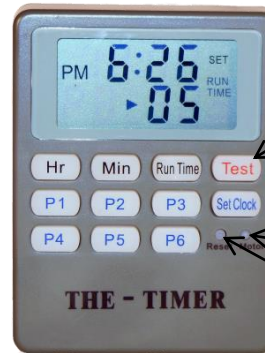

To Test:

 Push **Test**
 Display shows count down from 5 seconds then the timer will run for 5 seconds
 Red indicator light will glow during run time
 Reset button (recessed) to clear all settings

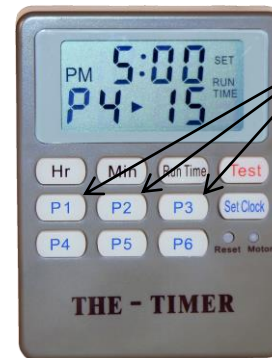

To Check Feeding Periods:

Push **P1, P2, P3**, etc. to check each feeding period
 Display shows feeding period 4 (**P4**) set to feed for a run time of 15 seconds at 5:00 PM
 Run time can be up to 30 seconds
 To feed less than 6 times a day, simply set run time for a feeding period to 0

THE-TIMER...easy to operate



Instructions on the back



Fuse protected

AA Batteries included

The-Timer.com

THE-TIMER

Operators Manual



THE-TIMER...easy to operate

- Instructions on the back
- 5 year warranty
- Compatible with any 6 or 12 volt control unit
- Wiring harness included
- Can feed up to 6 times a day
- Each feed time can be for a different duration
- Will run up to 1 year on 2 AA batteries
- Timer runs on main battery when hooked up to it
- Fuse protected with blown fuse indicator
- Built-in battery level indicator
- Easy 4 wire hook up, 2 to battery, 2 to motor
- Push button to reset

The-Timer.com